




## Aircraft Specifications

### Maximum Zone Weights

Freighter Maximum Weight Limitations by Pallet/Container Location		
Location	Upper (Lbs)	Upper (Kg)
P1	5,700	2,585
P2	5,700	2,585
P3	5,700	2,585
P4	9,200	4,172
P5	9,200	4,172
P6	5,000	2,268
P7	5,000	2,268
P8	5,000	2,268
P9	3,500	1,587

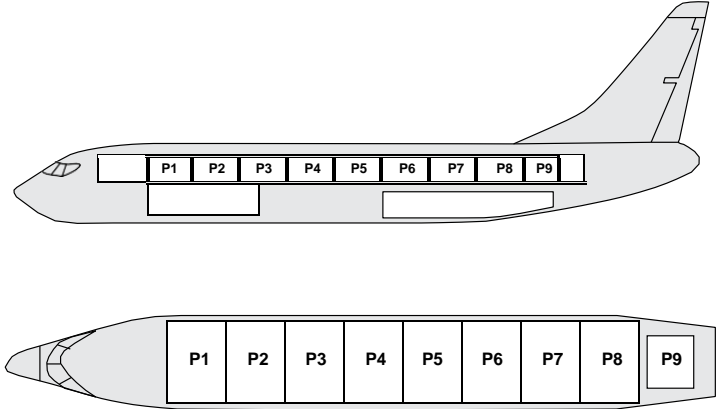

### Max Package Dimensions



Height (Inches)	Width (Inches)													
	5	10	20	30	40	50	60	70	80	88	100	108	125	
	Length (Inches)													
5	650	650	650	500	320	320	270	240	210	200	180	125	125	
10	650	650	650	500	320	320	270	240	210	200	180	125	125	
20	650	650	650	480	310	310	260	230	200	190	170	125	125	
30	650	650	650	480	310	310	260	230	200	190	170	125	125	
40	650	650	560	430	290	290	250	220	190	180	160	125	125	
50	650	650	560	430	290	290	250	220	190	180	160	125	125	
60	650	650	460	360	250	250	220	200	170	160	140	125	125	
70	650	650	370	300	220	220	190	170	*	*	*	*	*	
80	650	650	290	240	180	180	160	*	*	*	*	*	*	

Note: Use LD7, LD9, B or A type container with radii to clear aircraft contour




# SNEZLAR

Reliable. Efficient. Versatile.

## Aircraft Specifications

### Loose Loading

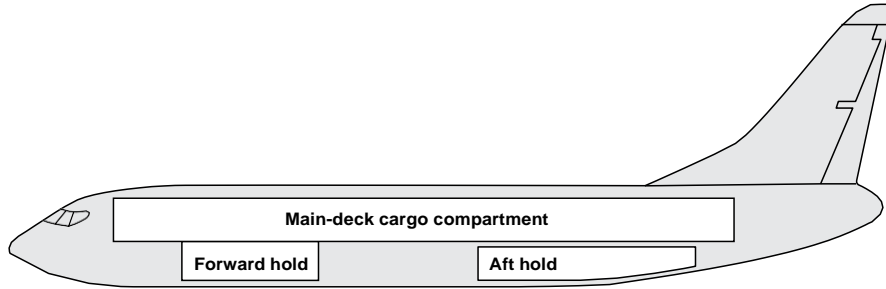

### Belly Capacity – B737-300F

Max. Gross Weight per Compartment  
in Kilograms


Compartment	Forward Hold			Aft Hold		
	1A	1B	2A	3A	4A	4B
Max. Weight	762	388	1118	2336	414	718
Volume (m <sup>3</sup> )	12			18.3		

Lower-deck Maximum Compartment Weights



S

### Aircraft Range

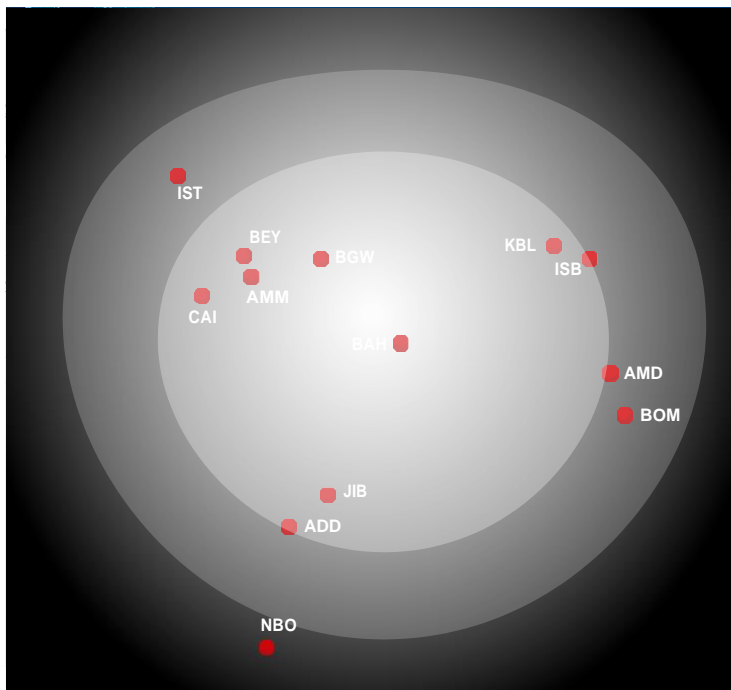

- Inner circle indicates max range B737 can operate from BAH with 33,000lbs payload
- Outer circle indicates max range B737 can operate from BAH with 2,200lbs payload
- Range can differ from the above depending on weather conditions and other factors